



# HERRINGBONE Series

---

**INSTALLATION  
GUIDE**

## ***Important Information***

Please note that this is only a guide, and we always recommend that you use professional installers for our products.

Incorrect flooring installation or preparation of the subfloor will void your warranty.

Please read through the entire Installation Guide before you begin installing your new flooring.

EraFlor does not recommend the Herringbone Series SPC 5mm to be considered as a DIY solution. We advise that it is only to be installed by professional installers experienced in Herringbone flooring.

Please note that if the EraFlor Herringbone Series SPC 5mm is installed by a customer as DIY, the warranty will be void.

### **A. Subfloor Preparation for Click Locking System**

- Subfloor surface must be clean, dry, well bonded, solid and even. The level shall be within a tolerance of  $\pm 3$ mm within an area of 1m<sup>2</sup> and preferred to be smoothy screeded.
- All wall edges when plastering shall be at right angles to avoid skirting gaps.
- All newly cemented and screeded floor must have at least 14 days curing time prior to the installation of our floor system.
- Ground floor or basement areas must be water proofed prior to the installation.
- Door clearance must be minimum 10mm from the screeded floor.
- Sanitary fittings, window and electrical fittings, painting and wet works and other trades that might result in flooring damage must be commenced and completed prior to the installation of our floor system.


### **Installation Method - Click Locking System**

- EraFlor click locking system is a floating floor system with glueless and nail-less installation. Must be stored in the room for a minimum of 24 hours acclimatization period prior to installation.
- Always check panels for visual defects before installation. This is to avoid unnecessary dismantling work at the later stage.
- EraFlor short panels must be assembled by tilting the tongue side with approximately 15-20 degrees slotting into the next panel groove without any use of adhesive. Then tilt the long panels at the tongue side to slot into the next long panel groove also at the angle of 15-20 degrees.
- It is compulsory to allocate a breaking joint on any area with more than 15 meters length or 15 meters width. 8mm expansion gap is to be allowed towards the wall and the breaking joint. Proper skirting and floor profiles shall be installed at the wall and breaking joints accordingly.

### **Installation Method - Click Locking System**

- Due to the principles of the floating installation method, it is strictly prohibited to affix any fittings onto the subfloor that would deter the required expansion.

# 1 STEP 1

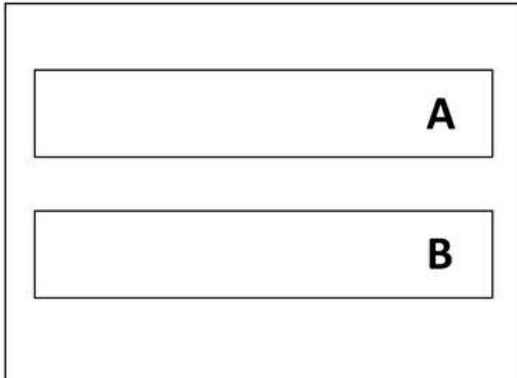


Separate the A and B panels.

# 2 STEP 2




Measure and cut the highlighted A1 panel according to the template.

### 3 STEP 3

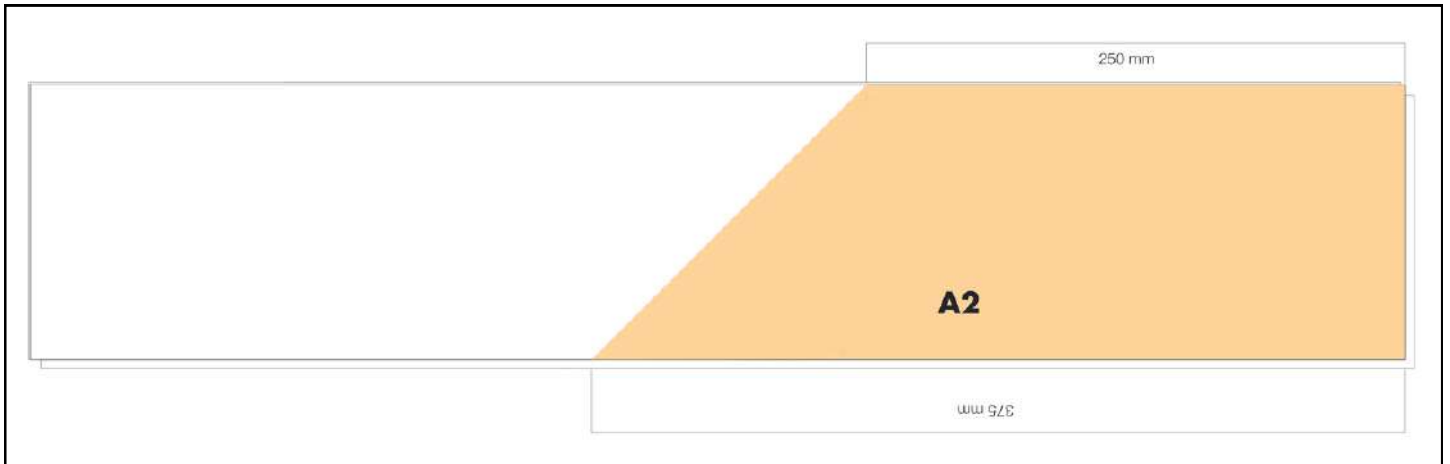

Measure and cut the highlighted A2 panel according to the template.

### 4 STEP 4

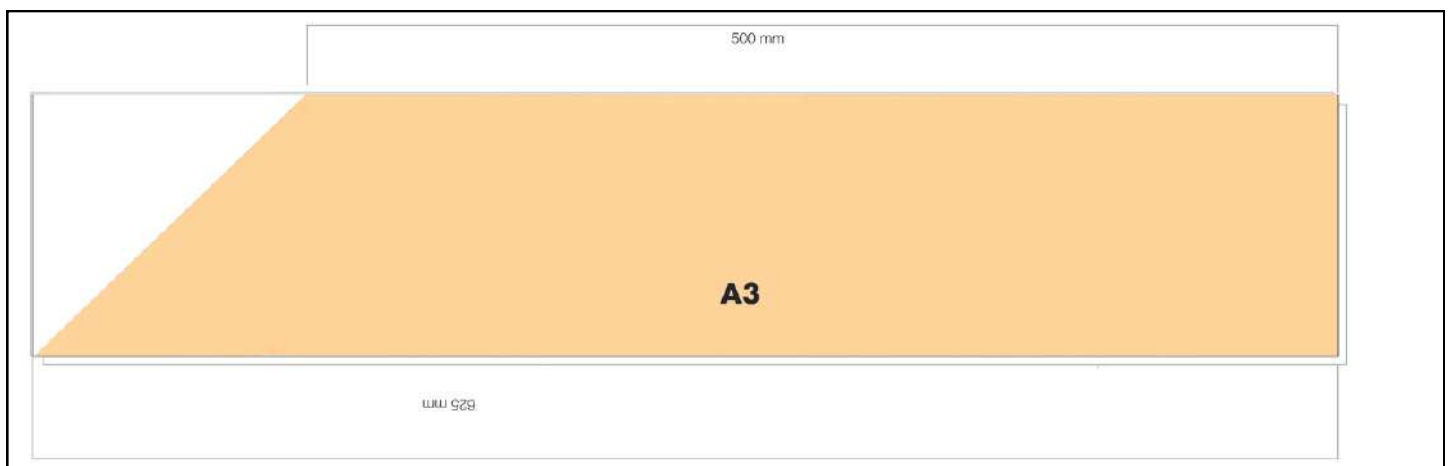


Measure and cut the highlighted A3 panel according to the template.

## 5 STEP 5




Measure and cut the highlighted B1 panel according to the template.

## 6 STEP 6

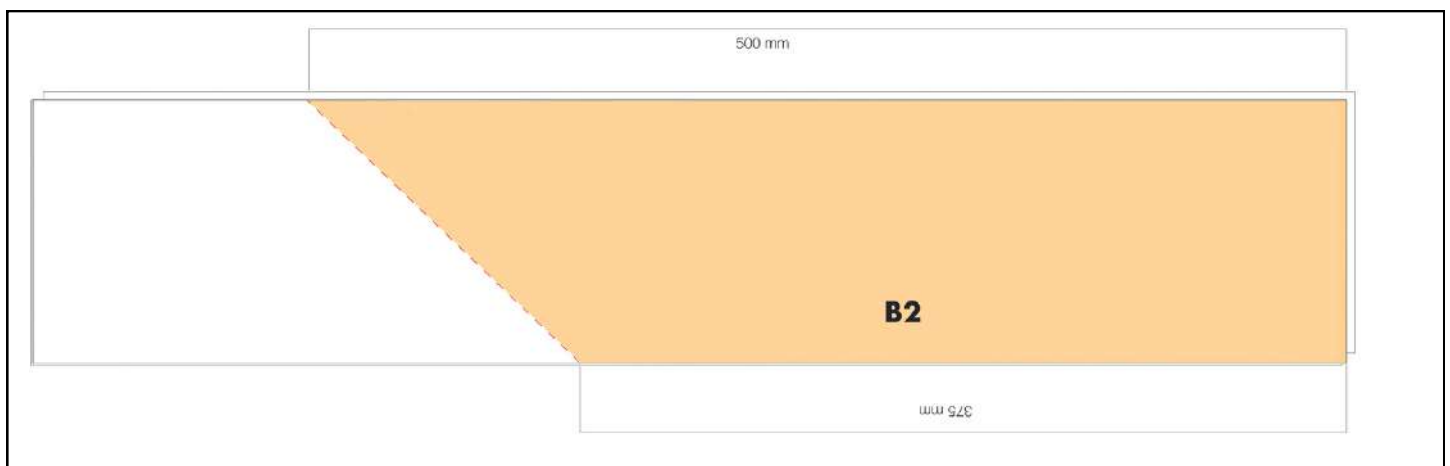


Measure and cut the highlighted B2 panel according to the template.

## 7 STEP 7

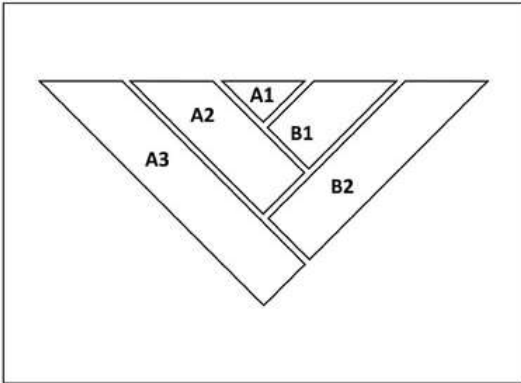


Assemble the cut panels into a triangle.

## 8 STEP 8

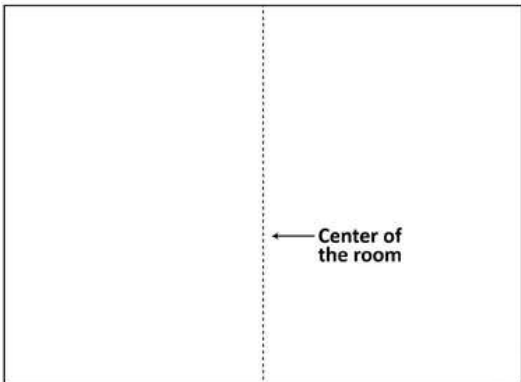


Measure the center of room and mark an installation line on the subfloor.

## 9 STEP 9

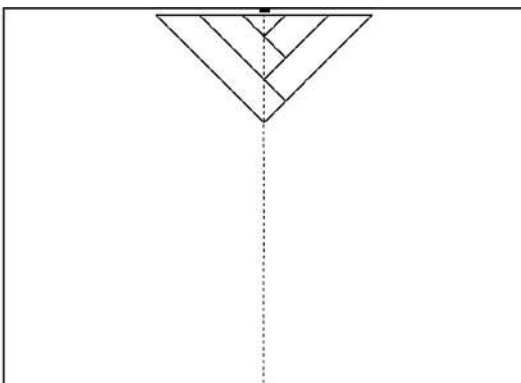


Lay the assembled triangle against the starting wall with an 8mm expansion gap. Ensure that the top center of the triangle is aligned with the installation line.

# 10 STEP 10

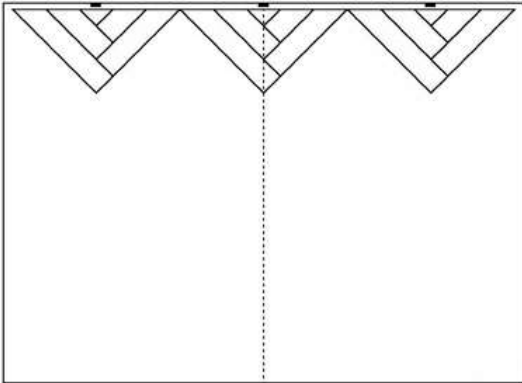


Repeat the triangles until the corners of the room

# 11 STEP 11

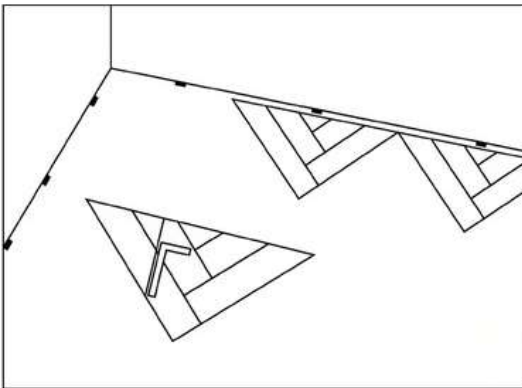


To fit in the corners, measure the distance between the last triangle and the wall. Mark the distance on the remaining triangles and cut accordingly.


# 12 STEP 12

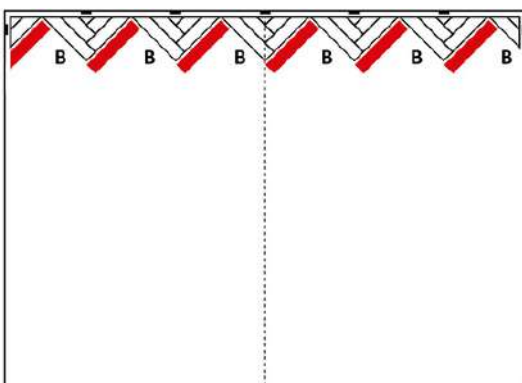

Install the B panels to connect the triangles. Cut the end panel to fit the wall side.

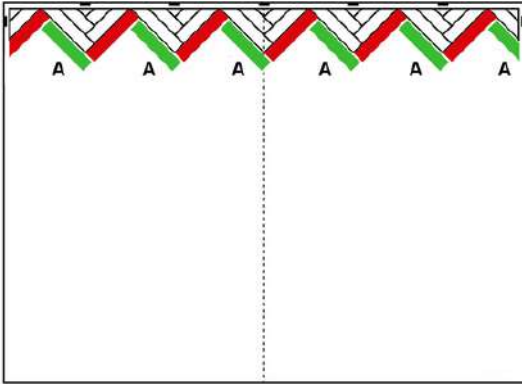**13 STEP 13**

Install the A panels. Cut the end panel to fit the wall side.

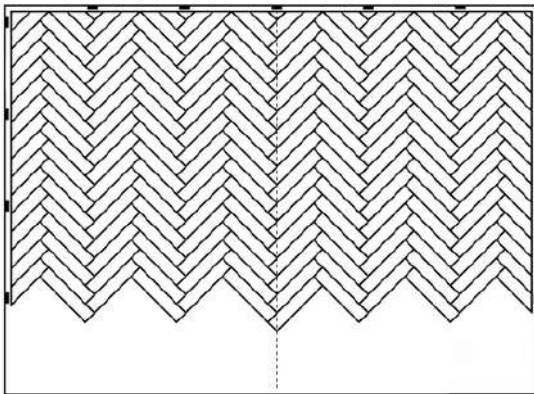**14 STEP 14**

Continue throughout the entire room.





# **HERRINGBONE**

## **Series**